

**Q: How to use TV-out function**

A:

1. Check the wiring connection and turn the TV in the related AV port.
2. Hold the reset button of the IC-7000
3. Power on the IC-7000 and keep holding on the reset button for 3 seconds and release
4. click the reset button again